

# PIR-1: Connecting to the PIR-1

Last Modified on 05/12/2016 1:29 pm EDT

Connecting the PIR-1 for learning and testing. Also, how to update the firmware.

---

## About:

This section will cover updating the driver for a **PIR-1**

## Symptoms:

Receiving an error message such as "**fail to update**" when connecting a **PIR-1** to a PC. Accelerator will display an error message that reads "Please connect a **PIR-1**" when you select Learn in a **Device Driver Edit** window.

Confirm the computer has the driver installed for that device and make sure the device says "ready to use"

To update the firmware simply download to the device itself.

MB

---

If you require any additional information or have any questions, please do not hesitate to contact our **technical support** team at **914-835-4484**.

---