

To see more articles like this, please see the URC Knowledgebase FAQ at <http://urcfaq.knowledgeowl.com/help>

Last Modified on 05/10/2016 10:54 am EDT

SNP-1: How to Enable Coaxial Out

The SNP-1 has multiple outputs for audio. Here is how to adjust the settings between them.

Switching the **SNP-1** to **Digital Coaxial** can only be done from the On-Screen display of the **SNP-1**. Using IR commands, once the on-screen GUI is displayed navigate to the settings menu, than Audio Output. Set audio output to SPDIF digital.

Note:

Only one output can be used at any time. The **SNP-1** cannot simultaneously use Coaxial and Analog out. If the **SNP-1** is reset it will restore the settings back to default (**analog**).

MB

If you require any additional information or have any questions, please do not hesitate to contact our **technical support** team at **914-835-4484**.

URC