

Factory Default Complete Control Remotes

Last Modified on 07/28/2016 12:33 pm EDT

A **factory reset**, also known as master **reset**, is a software restore of an electronic device to its original system state by erasing all of the information stored on the device in an attempt to restore the device's software to its original manufacturer settings.

On occasion, a factory reset may be required for troubleshooting issues with remotes and base stations

Note: to access any of the user settings on **all** interfaces, the button sequence **must** be **pressed** for **five (5)** or more **seconds**. To **factory default** the device, **press** and **hold** the **factory default** button for **five (5)** or **more** seconds, then **confirm** the reset.

WARNING! ALL DATA WILL BE LOST WHEN PERFORMING A FACTORY DEFAULT! Only perform when advised from a URC Technical Support Representative! WARNING!

Kp-900	Main + Select (5+Sec) > Factory Default
Mx-1200	Main + ENT (5+Sec) > Factory Default
Mx-3000	Main (5+Sec) > Press and Hold Factory Default
Mx-350	Main + Stop Button (5+Sec) > Factory Default
Mx-450	Main (5+Sec) > User Setting > Factory Default
Mx-5000	Main + Ok (5+Sec) > Press and Hold Factory Default
Mx-6000	Mute + Ok (5+Sec) > Press and Hold Factory Default

Mx-780	Main+ ENT (5+Sec) > Factory Reset
Mx-850	Main + Stop (5+Sec) Button > Factory Reset
Mx-880	Watch + Enter (5+Sec) > Erase& Reset
Mx-880z	Watch + Enter (5+Sec) > Erase & Reset
Mx-890	Main + ENT (5+Sec) > Factory Default
Mxw-920	Main + ENT (5+Sec) > Format
Mx-900	Listen + ENT (5+Sec) > Factory Default
Tx-1000	Listen + ENT (5+Sec) > Factory Default
Mx-810	Activity + ENT (5+Sec) > Erase& Reset
Mx-980	Listen + ENT (5+Sec) > Factory Default
Mx-950	Listen + ENT (5+Sec) > Factory Default

If you require any additional information or have any questions, please do not hesitate to contact our **technical support** team at **914-835-4484**.
