Enabling IP Control on Compatible Anthem Audio Devices


Last Modified on 01/08/2018 4:41 pm EST

Enabling IP Control on Compatible Anthem Audio Devices

IP control on compatible **Anthem** audio devices needs to be enabled to allow integration with **Total Control**.

To enable IP control, locate the **Network Settings Menu** on the **Anthem** device and complete the following:

- 1. Enable IP control
- 2. Enable Standby IP Control
- 3. Note the device Port Number displayed in the menu.
- 4. Go to **Step 6-Network Setup** in Accelerator, select **Non URC Device** and locate the **Anthem** device. The default **Port Number** is set to 80 and must be changed.

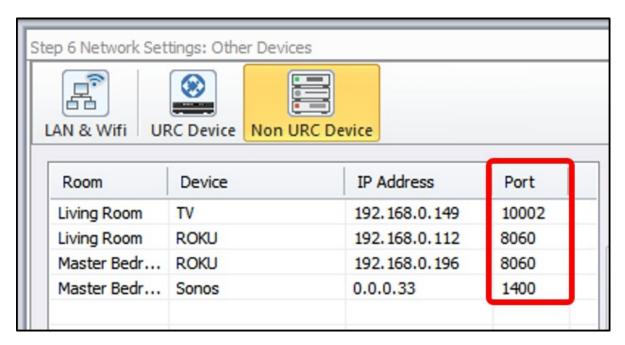

Double click on the Port Number and change it to reflect the actual Port Number.

- 5. Save the modified file and **download** it to the controller.
- 6. Wait for system to reboot, then test for functionality.

