

TDC-7100: How to Soft Reset the TDC-7100

Last Modified on 01/03/2018 3:31 pm EST

The TDC-7100 tabletop controller is powered by a rechargeable battery. If the device requires a soft reset (power cycle) please follow steps below:

1. Locate the **Reset Button** on bottom-side of the TDC-7100.



2. **Press and release** the **Reset Button**, there is no need to hold it down.
 3. The front screen will shut off, and then reboot. □
-