



If a “Full Range” Line Level audio output from the Preamplifier Output is desired, set the “Max Volume” parameter to “100%” and the “Turn On Volume” to “Preset – 100%”.

**Do not connect speakers to the zone’s speaker output** for this zone if **ONLY** the Preamplifier Output is desired and being used. The zone’s volume output is fixed at 100% using the **Turn On Volume to Preset – 100%** - this will most likely damage any speaker connected to this zone.

Audio Settings: Zone 1L Mono, Lanai Connect To Zone

Zone Type:  Stereo  Mono

Zone Output:  Variable  Fixed

Input Change Fade In  
Time: 1.5 sec Apply Global

Volume:  
Max Volume: 100 % Apply Global  
Turn On Volume:  Last Used  Preset 100 %  
Turn On Vol. Ramp Rate: 1.5 sec Apply Global

#### Additional Information & Resources:

To learn more about HDA products and programming, please see the [HDA Programmers Guide](#) or the Accelerator 3 online [Programming Guide](#).