

How to Reboot the TRC-1120

Last Modified on 01/23/2025 2:47 pm EST

How to Reboot the TRC-1120

This article details the steps to **Reboot the TRC-1120** without removing the battery cover or the battery connections.

Rebooting the TRC-1120

1. Press and hold both the **MENU** and **EXIT** buttons for 5 seconds.
2. Wait for the device to reboot.



Press and hold both buttons for
5 seconds until the device reboots

Additional Information & Resources:

To learn more about Accelerator 3 configuration and programming, please see the Accelerator 3 online [Programming Guide](#).
